

Assembly instruction, A-line

This is a special A-Line order which requires some special directions. These are specified in the illustrations below.

Please read this information before you start the assembling.




The first step is to assemble all the foam seats on to the seat profile. There after you assemble the bended bases on to the seat profile. The screw used is M6x16 (for table top use M6x14).




The **Threaded rod for end** is screwed on to the table stand.

Then you push the rod into the seat profile. You lock the rod from the other side with a screw (M8).

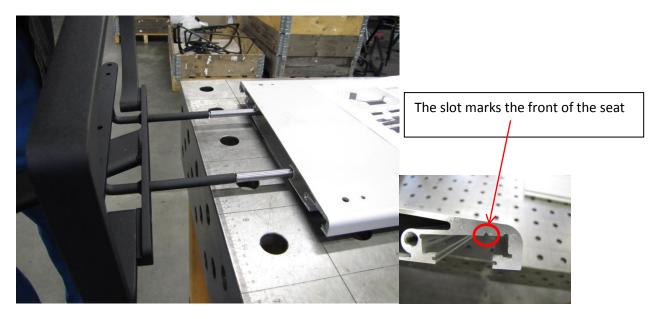






The threaded rod is pushed into the seat profile and locks with screw from each side (M8).

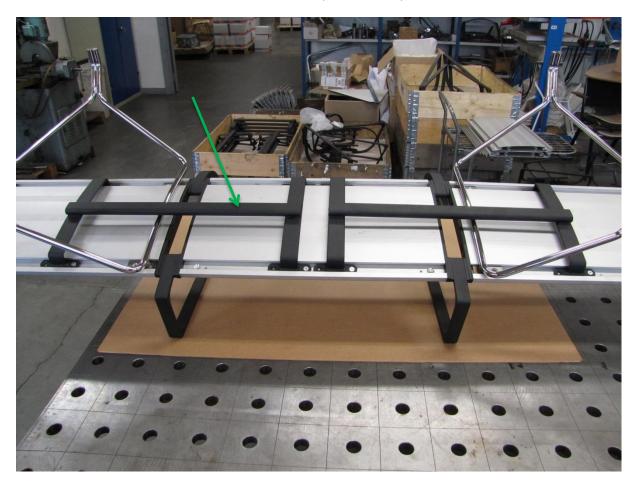


The reinforcement brackets are screwed on to the profiles with predrilled holes (X) (M6x16)

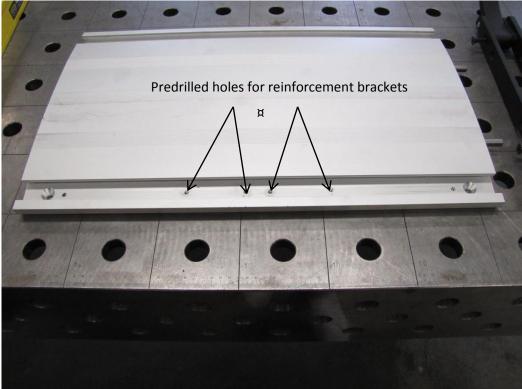

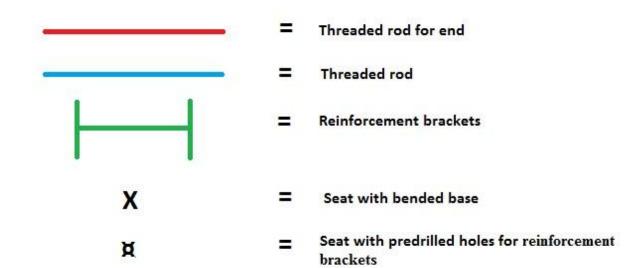

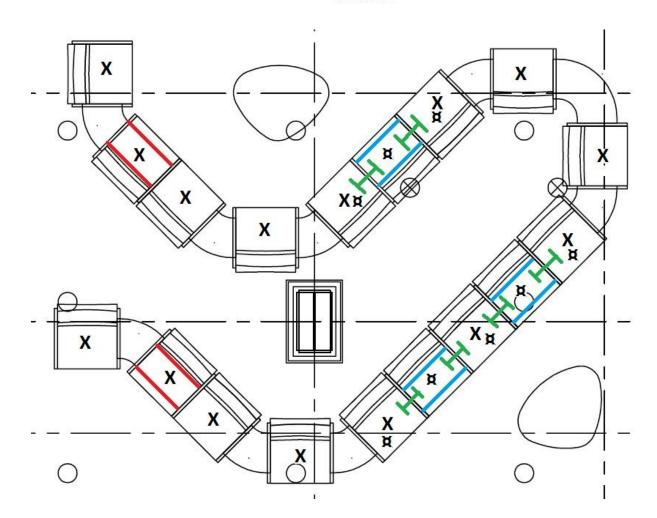

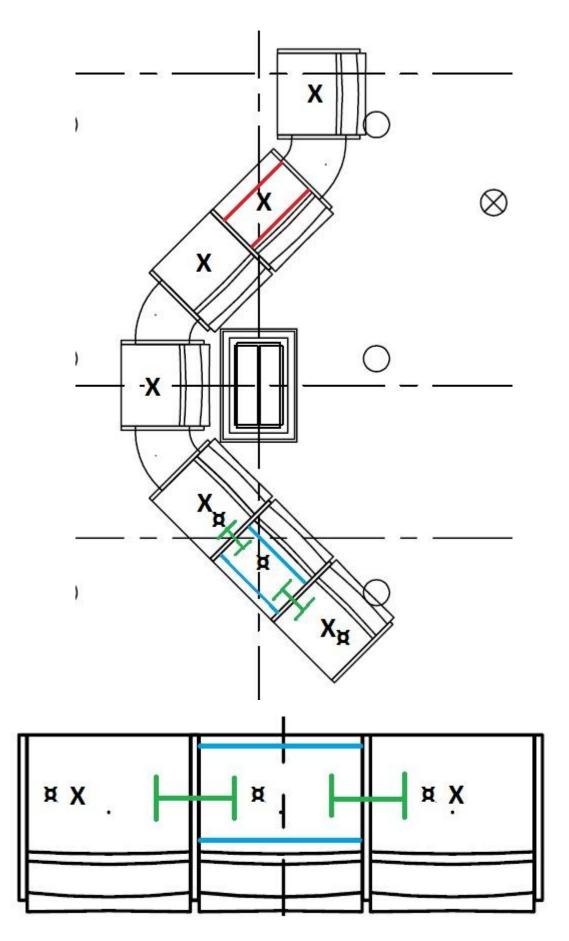

Lammhults Möbel AB

